
Hot Water Storage Tank with large surface coil BA-ST 9030-1FEDC BA-ST 9040-1FEDC BA-ST 9050-1FEDC

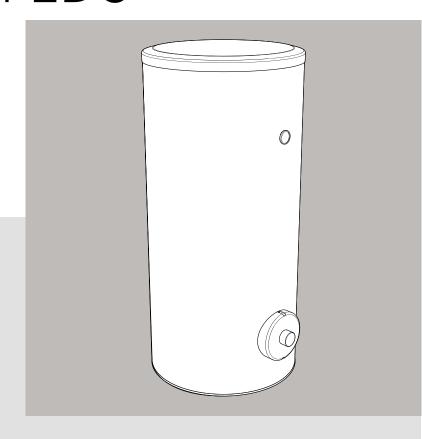





Content

1	General	3
	Symbols	
	Introduction	
	Intended Use	
2	Design	4
3	Installation	5
	Location of the Storage Tank	_ 5
	Housing Disassembly	
	Installation Requirements	_ 6
4	Connection and start-up	7
	Connection	_ 7
	Start-Up	
	Thermal Insulation of the System	
	Warnings and Practical	_ 8
	Recommendations	

5 Maintenance	_9
Inspection of the Protective	_ 9
Magnesium Anode	_ 9
Measurement of the	
Protective Magnesium Anode Wear_	_ 9
Replacement of the Protective	
Magnesium Anode	9
Cleaning of the Storage Tank	10
6 Accessories and spare parts	. 11
7 Service	12
8 Recycling and disposal	12
9 Technical data	13
Dimensions	. 14

All installation diagrams in this manual do not replace the system design; they can only be used for illustrative purposes. The product is not intended for use by persons with reduced physical fitness/mental efficiency or without sufficient experience and knowledge, if they are not supervised or instructed by a person responsible for their safety. Operation of the product by children is strictly prohibited.

We reserve the right to make the product design changes and changes in the manual. ©NIBE 2019

1 General

Symbols



IMPORTANT

This symbol informs about the risk to the device or a person



CAUTION

This symbol points to important information to be noted when operating the device easier.



TIP

This symbol shall mean tips to make product operation easier.

Introduction

Thank you for your confidence and choice of equipment by NIBE. To fully benefit from the advantages of this product, please read this Manual before using it, and in particular chapters relating to the application, installation and maintenance, and warranty. Please keep this Manual in a safe place for future reference.



IMPORTANT

Sections of the Manual relating to the installation, inspection and maintenance are intended for the qualified installer.



CAUTION

The manufacturer shall not be held liable for any damages caused by failure to comply with the recommendations and observations contained in this Manual.

Intended Use

NIBE hot water storage tanks with a large surface coil are only intended for heating up, storage and supply the domestic hot water.

Vertical storage tank BA-ST 9030/9040/9050-1FEDC with a large surface coil is designed to heat and store hot water in systems with one heat source, e.g. solar heating system, central heating boiler or a fireplace and with a water jacket. The storage tank enables trouble-free operation with almost any central heating system with forced circulation. It is easy to install, safe and comfortable to use, if installed and operated in accordance with the advices contained in this Manual. The heated water can be supplied to several intake points at various, mutually distant locations, such as, a bathtub, washbasin, sink, etc.



CAUTION

BA-ST 9030/9040/9050 - 1FEDC storage tanks with one high capacity coil are designed to heat up and supply water for domestic purposes. Any inappropriate use, not in compliance with its intended use is not permitted. Neither manufacturer nor supplier shall be responsible for damages resulting from this.

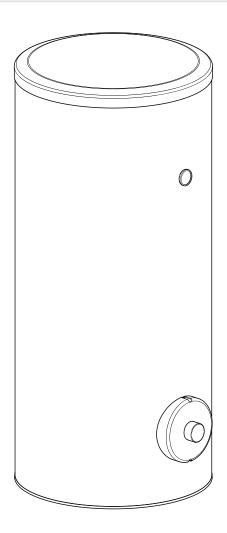


Fig. 1 BA-ST 9030/9040/9050- 1FEDC hot water storage tank.

2 Design

Vertical storage tank BA-ST 9030/9040/9050-1FEDC with a large surface coil is a pressure equipment, i.e. the pressure within the storage tank and coil are equivalent to the pressures in the corresponding systems.

Storage tank is made of high quality steel and is equipped with one helical coil that can simultaneously operate with independent heat source, e.g. a solar heating system, fireplace with water jacket or central heating boiler. The hot water tank is protected against corrosion by ceramic coating and insulated protective magnesium anode. Thermal insulation of the tank is a specially selected insulation that provides excellent thermal insulation properties of all devices. Storage tanks have aesthetic plastic housing, a temperature indicator, inspection opening and connectors for mounting electric heating unit and connecting the hot water circulation.



TIP

BA-ST 9030/9040/9050-1FEDC is ready for the installation of a heating unit containing an electric heater with thermostat and thermal switch.

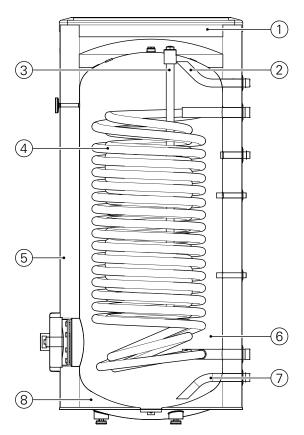


Fig. 2 Section of the BA-ST 9030/9040/9050- 1FEDC storage tank.

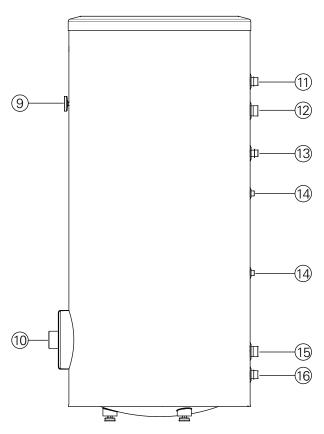


Fig. 3 Side view of the BA-ST 9030/9040/9050 - 1FEDC storage tank.

Description:

- 1. Upper insulation of the storage tank
- 2. Hot water intake pipe
- 3. Protective magnesium anode
- 4. Large surface coil
- 5. Thermal insulation
- 6. Enamelled tank
- 7. Cold water supply pipe
- 8. Lower insulation of the storage tank
- 9. Thermometer
- 10. Inspection opening with 11/2" Female sleeve
- 11. Hot water intake connector pipe
- 12. Coil supply connector pipe
- 13. Hot water circulation connector pipe
- 14. Temperature sensor cover
- 15. Connection of return line from the coil
- 16. Cold water supply connector pipe

3 Installation

Location of the Storage Tank

Storage tank can be installed in any room protected against temperatures below 0 °C and convenient for the user (e.g. in the basement, boiler room, etc.). Location and manner of installation must ensure trouble-free maintenance and servicing of the unit in the future. However, we recommend installation of the buffer tanks in the immediate vicinity of the main heat source in order to avoid unnecessary heat losses. Consider the filled tank weight when selecting its location. As a rule, select the device location in a way allowing the rational routing of both the hot water and the heating lines. Insulate thoroughly all hydraulic lines and the storage tank fittings in order to avoid any energy losses.

If space for the installation of the magnesium bar anode (used as standard), you can use the appropriate titanium anode (that should be installed in accordance with the anode manufacturer's instructions) or the appropriate magnesium chain anode. For the specification of the protective anodes available at NIBE, see Section 6 Accessories and Spare Parts.




Fig. 4 Min clearance for the replacement of the protective magnesium anode.

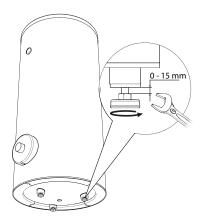


Fig. 5 Levelling the unit.

The storage tank stands on three feet that can be adjusted within the range from 0 to 15 mm to level the tank.



CAUTION

For the minimum clearances to be observed when installing the storage tank, see Table 3.

Housing Disassembly

Removable housing with thermal insulation facilitates transport and installation of the storage tank. Disassembly the housing in the following order (see Fig. 6):

- 1. Remove the Temperature gauge, plug of the heating element connector pipe and blanking plate of the inspection opening (1).
- 2. Remove the upper cover of the housing together with thermal insulation (2).
- 3. Remove the plugs from the connector pipes and black bushings (3).
- 4. Remove the fixing screws and the strip connecting the housing jacket (4).
- 5. Remove the jacket surrounding the tank (housing jacket, 5).
- 6. Remove the four-piece thermal insulation (6).

After the installation of the storage tank in its final location, reinstall the removed components in the reverse order.

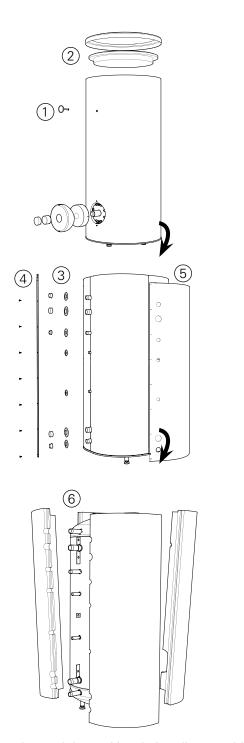


Fig. 6 Housing and thermal insulation disassembly.

Installation Requirements

IMPORTANT

Installation and commissioning of the storage tank shall only be done by appropriately qualified installer. The installer should inform the user of the functions of the product and provide the necessary information on its safe use.

Protection against overpressure shall be made in accordance with the relevant regulations in force.

Connect the storage tank to the water supply system of water pressure at least 1 bar and max 6 bar and to the heating systems where parameters of the heating medium may not exceed the allowable operating conditions of the coil (see Table 4 Technical data). Install a pressure reducer if the pressure at the cold water inlet to the tank is higher than allowed.

Connect the heating and water supply systems in accordance with the installation diagram (see Fig. 7.)

Pressure increases during heating the water in the storage tank. Therefore, the appropriate safety valve must be installed in storage tank, at the cold water inlet that will protect the storage tank against overpressure. During heating the water, small and temporary water flow from the safety valve can occur, which indicates that the pressure has increased above the rated value, which triggered the valve. This may in no way be prevented. Blocked safety valve can cause equipment failure. Drain the outflow from the safety valve to the sewerage or drain grate. Safety valve drain line should be installed with a decline, in an environment free of freezing and remain open to the atmosphere. The manufacturer is not responsible for flooding the room through the safety valve.



TIP

In order to minimize the flow of water from the safety valve associated with the thermal expansion of the liquid, it is advisable to install a suitable expansion vessel at the cold water connection (see Fig. 7 item 9.)



TIP

We recommend installing a strainer in order to protect the pumps, check valve and the components of the heating system.



CAUTION

Installation of the appropriate safety valve in the cold water supply line protecting the unit against overpressure is mandatory!



CAUTION

Installation of necking of any kind (such as reducers, dirt pockets, etc.) and cut-off valves between the storage tank and the safety valve is not allowed. Only a T-pipe with a drain valve and a T-pipe with an expansion vessel may be installed in these line sections.



CAUTION

Never block the safety valve or drain line. This can cause a dangerous overpressure in the storage tank.



CAUTION

When heating water, slight, temporary discharge from the safety valve can occur. This is a correct safety valve function. Any attempt to interfere in its operation can lead to the danger and destruction of the storage tank.



CAUTION

Never use the equipment with clogged safety valves.

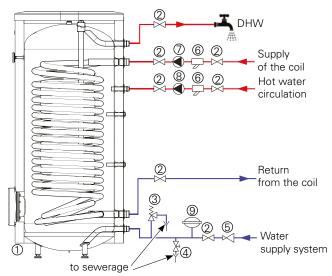


Fig. 7 Installation diagram of the BA-ST 9030/9040/9050-1FEDC storage tank with one coil.

- BA-ST 9030/9040/9050- 1FEDC storage tank.
- Cut-off valve.
- 3. Safety valve.
- Drain valve.
- Pressure reducer (option, if the pressure in the system exceeds the allowable value).
- 6. Strainer.
- C/H circulating pump. 7.
- 8. Hot water circulating pump.
- 9. Hot water expansion vessel.

4 Connection and start-up

Connection

After the installation and levelling the tank, follow the procedure below (for the connector pipe numbers, refer to Fig. 3):

- Remove protecting plugs from the connector pipes.
- 2. Connect the hot water intake line (11).
- 3. Connect the cold water supply line together with the required safety valves (16).
- 4. If the system has the hot water circulation system, connect it to the connector pipe (13). Otherwise, plug the pipe.
- 5. Connect the supply (12) and return (15) of the heating medium to the coil.

Fill the storage tank with water and vent it after making correct connections.



CAUTION

If there is an electric heating module installed in the storage tank, fill the tank with water before connecting it to the electrical installation.

Filling and venting the hot water storage tank:

- Open the cold water cut-off valve at the inlet and the hot water intake point.
- 2. Fill the storage tank until obtaining uniform water outflow at the hot water intake point. Close the intake points.
- 3. Fill the coil with the heating medium, and vent it.
- 4. Check tightness of the entire system.

When properly filled and vented, the storage tank is ready to use.



We recommend connecting the tank connector pipes with the system lines by means of unions to allow disconnection of the tank, if required.



CAUTION

Open the hot water intake valves before heating the system up for the first time or after a longer break in its operation in order to check whether the storage tank is filled with water and the cut-off valve at the cold water inlet is not closed.

Thermal Insulation of the System

In order to minimize thermal energy losses, insulate all connector pipes, pipelines and temperature sensor covers thoroughly after the installation of the unit and performance of the leak proof test. For this purpose, use thermal insulation of correctly selected thickness and thermal insulation parameters.



TIP

Lack of thermal insulation, its incorrect thickness or insulation made of inadequate materials will cause decrease of thermal insulation properties of the unit and the system.

Warnings and Practical Recommendations



CAUTION

To prevent bacterial growth we recommend to make sure a periodically increase of hot water temperature for a shorter time at regular intervals e.g. every 14th day.

We recommend the following:

- Check the operation of the safety valve as described by the manufacturer of the valve in order to check whether it is not clogged.
- Clean the inside of the storage tank periodically.
 Cleaning intervals depends on the hardness of the water present in a given area.
- To ensure optimum protection of the storage tank against corrosion, we recommended checking the level of wear of the isolated magnesium anode once a year.
- In the systems with the electric heating unit, ensure that the electrical installation is properly protected by protective circuit.
- In order to eliminate any odour of hydrogen sulphide (caused by bacteria in the oxygen deficient water), we recommend observing the periodic cleaning of the tank and replacement of the anode and, in addition periodically increase the hot water temperature in tank to prevent bacterial growth.

- Limit the setpoints of the heating medium temperature controllers in the storage tank supply lines to 80 °C in order to avoid triggering of the thermal cut-off in the electric heating module.
- In order to reduce the possibility of scalding by the water, we recommended to set the water heating temperature in the storage tank (of both the heating unit and the coil) so, that it does not exceed 60 °C. This will also help to extend the life of the storage tank.
- Report any malfunctions in the storage tank operation to the authorized service centres. You can find the complete list of our authorized service centres at our website.

It is forbidden to:

- Activate the heating medium circuit or electric heating unit if the tank is not filled with water.
- Use the storage tank, if you find any malfunction of the safety valve.
- Install any device (such as cut-off and/or check valves, etc.) between the storage tank and the safety valve (except T-pipes).
- Make any unauthorized repairs.
- Stop water leaks from the safety valve.
- When heating with only the electric unit, the coil circuits may not be isolated.

5 Maintenance

Periodic inspections and maintenance are the conditions of continuous operational readiness, reliability and a long service life of the product.

Maintenance activities include the following:

- Routine inspections and replacement of the protective magnesium anode.
- Cleaning of the storage tank.



CAUTION

Check the safety valve performance as specified by the valve manufacturer periodically (min. every 14 days) or before each start-up of the heater after decommissioning.

Inspection of the Protective Magnesium Anode

Storage tank BA-ST 9030/9040/9050-1FEDC with coil is, in order to protect them against corrosion, coated inside with ceramic enamel and in addition, protected with isolated protective magnesium anode. The anode corrodes first under normal operation, thus protecting the storage tank jacket. Therefore, you have to inspect its condition from time to time. Corrosion rate of the protective anode is different and depends upon the quality of water in the area. We recommend checking the protective anode condition once a year in order to ensure optimum corrosion protection.



The use of the isolated anode allows you to monitor the degree of wear of the anode by measuring the intensity of the protecting direct current without having to remove it and empty the tank (interrupting operation of the storage tank). This solution simplifies operation and additionally contributes to the reliability and long lifetime.

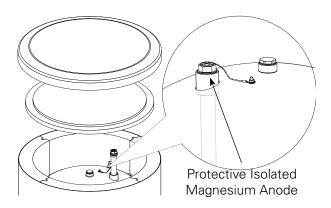


Fig. 8 Insulated protective magnesium anode.

Measurement of the Protective Magnesium Anode Wear

In order to check the degree of wear of the anode, do the following (see Fig. 11):

- Remove the housing cover together with thermal insulation.
- 2. Disconnect the connecting conductor (protective) from the storage tank top head.
- 3. Connect an electric meter (range in mA) between the protective conductor and the M5 threaded pin and measure the intensity of the protective direct current.

Intensity of the protective direct current should not be lower than 0.3 mA at full storage tank. If it is too low, remove the anode and check its wear visually. If the anode is significantly corroded (above 50 % loss), replace it immediately. Connect the anode protective conductor to the tank after the measurement.



CAUTION

If the current intensity measurements do not indicate any wear of the anode, its max operating time is not longer than 18 months. The anode should be replaced after this time.

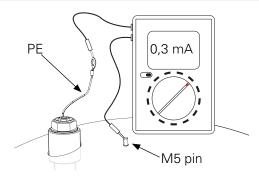


Fig. 9 Measurement of the protective direct current intensity.

Replacement of the Protective Magnesium Anode

Replace the protective magnesium anode every 18 months (regardless the measurement). Instead of the magnesium anode, you can use the titanium anode. Install it in accordance with the anode installation manual.



CAUTION

Replace the protective magnesium anode every 18 months. Its timely exchange and proper installation are the conditions to maintain the warranty on the storage tank.

When replacing the magnesium anode, follow the procedure below (see Fig. 10):

- 1. In units with the electric heating unit installed, disconnect power from the unit first.
- 2. Switch the storage tank coil heaters OFF and wait until the water inside cools down.
- 3. Cut-off the hot water supply and drain some water from the tank through the drain valve (see Fig. 7 item 4).
- 4. Remove the housing cover together with thermal insulation (1).
- 5. Remove the anode protective conductor (2).
- 6. Remove the worn magnesium anode (3).
- 7. Screw the new magnesium anode.
- 8. Connect the anode protective conductor to the storage tank.
- 9. Fill the tank with water and vent it as described in par. Start-Up.
- 10. Check tightness of the installed anode.
- 11. Reinstall the thermal insulation and the housing cover.

Once making the above steps, the storage tank is ready to use. Ensure that the anode protective conductor is connected to the storage tank top head after installing the new isolated magnesium anode. Lack of contact between the anode and the tank will interfere operation of the anode and the tank will not be protected against corrosion.

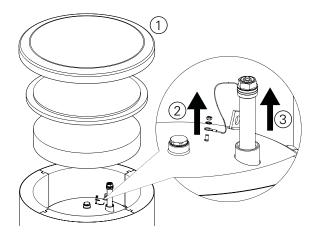


Fig. 10 Replacement of the protective magnesium anode.

Connect the anode protective conductor to the M5 pin fixed to the top head of the storage tank.



TIP

Ensure that the anode protective conductor is connected to the storage tank top head after installing the new isolated magnesium anode. Lack of contact between the anode and the tank will interfere operation of the anode and the tank will not be protected against corrosion.

Cleaning of the Storage Tank

Boiler scale is precipitated from the heated water during the storage tank operation. The amount of deposited scale depends on the water hardness, the operating temperature and operating time. Heating surfaces covered with boiler scale reduce the heat output of the storage tank, increase power consumption and extend the heating time. It is recommended to clean the storage tank from deposits at least once every two years. In the case of hard or very hard water, cleaning should be carried out at shorter intervals.

Storage tank cleaning procedure:

- Prepare a new inspection opening gasket. The old gasket may not be reused (for the list of the inspection opening gaskets, see Section 6 Accessories and Spare Parts).
- 2. In storage tanks with the electric heating unit installed, disconnect power from the unit first.
- 3. Switch the storage tank coil heaters OFF and wait until the water inside cools down.
- 4. Cut-off the hot water supply and drain the storage tank through the drain valve (see Fig. 7 item 4).
- 5. Remove the inspection opening blanking plate and gasket.
- 6. Remove the inspection opening screws and flanged cover and flush the storage tank and remove accumulated sludge and lime slurry. If necessary, remove lime deposits from the coil – this guarantees a proper heat exchange. Pay special attention to not damage the ceramic enamel coating.
- 7. Replace a new gasket and the inspection opening flanged cover. Screw tightening torque: 25±5 Nm.
- 8. Fill the tank with water and vent it as described in par. Start-Up.
- 9. Check tightness of the inspection opening.
- 10. Replace the insulation and inspection opening blanking plate.

Once cleaned, the unit is ready to use.



ПΡ

During mechanical cleaning, be careful to not damage the enamel. In the case of chemical cleaning, pay special attention to neutralize the chemicals used for cleaning.

10

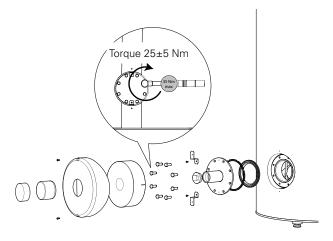


Fig. 11 Installation of the inspection opening cover (mounting order).

6 Accessories and spare parts

Accessories and spare parts for BA-ST 9030/9040/9050 - 1FEDC storage tank can be purchased at our distributors or authorized service centres.

Table 1. Inspection opening gaskets.

Type of gasket	Inspection opening dia.	Storage tank model
Flanged gasket ø 150	ø120	BA-ST 9030- 1FEDC 9040- 1FEDC 9050- 1FEDC

Table 2. Heating units.

Storage tank model	Туре	Heating unit power	Connector pipe dia
BA-ST	ME 1030	3,0 kW	1 ½"
9030-1FEDC 9040-1FEDC	ME 1045	4,5 kW	1 ½"
9050- 1FEDC	ME 1060	6,0 kW	1 ½"
BA-ST 9050- 1FEDC	ME 1090	9,0 kW	1 ½"

Table 3. Protective anodes.

Storage tank model	Connector pipe dia.	Type of anode	A _{min} *
BA-ST 9030- 1FEDC	1"	Bar ø26x1100	1150 mm
BA-ST 9040- 1FEDC	1 ¼"	Bar	1150 mm
BA-ST 9050- 1FEDC	1 /4	ø33x1100	1100 111111
BA-ST 9030- 1FEDC 9040- 1FEDC 9050- 1FEDC	1 ¼"	Titanium anode 400	420 mm

^{* -} Amin - Minimal clearance for the replacement of the protective magnesium anode.

7 Service

Report any malfunctions in the buffer tank operation to the authorized service centres.



S CAUTION

The storage tank may only be repaired / serviced by an authorized service since improper repair can cause safety risks, and the loss of product warranty.

8 Recycling and disposal

According to the NIBE rules, the products have been manufactured of high quality materials using the latest technologies and solutions that do not endanger the environment.

When selecting materials, we took into account both the possibility of reuse of materials (recycling) that can be disassembled and separated from materials unsuitable for recycling, as well as risks arising from the processing of materials not intended to reuse.

The purchased device consists in more than 90 % of parts that can be recycled and reused, so they are safe for the environment and human health.



S CAUTION

In order to prevent damage to piping systems and environmental pollution, the product should only be disassembled and taken out of service by appropriately qualified specialists.



CAUTION

At end-of-life, take care that the product and all the equipment were disposed of in accordance with applicable regulations.



TIP

The packaging, in which the product is delivered, is made mainly of materials suitable for recycling and utilization. After installation, you should ensure the proper disposal of packaging in accordance with applicable regulations.

12

9 Technical data


Table 4. Technical data.

Parameter		U/m	Storage tank model BA-ST			
		U/III	9030-1FEDC	9040-1FEDC	9050- 1FEDC	
Energy efficiency class	S [*]	-	С	С	С	
Storage volume (V)*		I	265	344,2	442	
Standing loss (S)*		W	94	96,7	98	
Coil area		m ²	3,85	Į.	5	
Max tank operating te	mp.	°C		85		
Max allowable instantaneous temp. in the tank		°C	95			
Max coil operating temp.			110			
Max tank operating pr	essure	bar	10			
Max coil operating pre	ssure	bar		10		
Coil power **	70/10/45 °C	kW	71 82			
Coil capacity**	70/10/45 °C	l/h	1720	20	00	
Electric heating module connection			1 ½"			
Corrosion protection			ceramic enamel + magnesium anode			
Magnesium anode dimensions		mm/cal	ø26x1100 / 1" ø33x1100 / 1 ¼"		0 / 1 1/4"	
Weight		kg	165	198	215	

^{*} Acc. to EU regulations No. 812/2013 & 814/2013.

^{**} At the heating medium flow rate equal to 2.5 m3/h and the heating medium temperature 70 °C, supply water temperature 10 °C, and hot water temperature 45 °C.

Dimensions

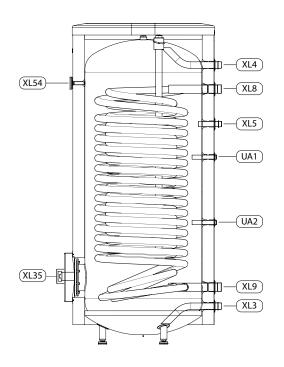

Rys. 12 Connector pipe of the BA-ST 9030/9040/9050- 1FEDCstorage tank

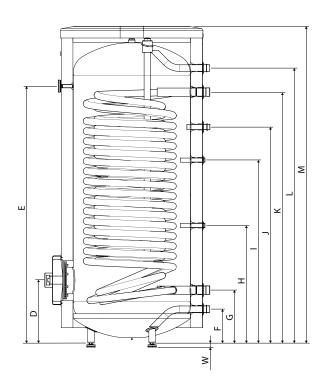


Fig. 13 Dimensions of the BA-ST 9030/9040/9050- 1FEDC storage tank

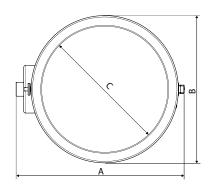


Table 5. Dimensions of nozzles .

Connection		U/m	BA-ST XXXX- 1FEDC		
	Connection		9030	9040	9050
XL 54	Thermometer enclosure	mm	ø10 wewn.	ø10 wewn.	ø10 wewn.
XL35	Inspection opening with 1½" Female sleeve	mm	ø120	ø120	ø120
XL4	Hot water outlet	mm	1" zewn.	1" zewn.	1" zewn.
XL8	Coil supply	mm	1" zewn.	1 ¼" zewn.	1 ¼" zewn.
XL5	Hot water circulation	mm	¾" zewn.	¾" zewn.	¾" zewn.
UA1	Temp. sensor enclosure	mm	ø16 wewn.	ø16 wewn.	ø16 wewn.
UA2	Temp. sensor enclosure	mm	ø16 wewn.	ø16 wewn.	ø16 wewn.
XL9	Return from coil	mm	1" zewn.	1 ¼" zewn.	1 ¼" zewn.
XL3	Cold water input	mm	1" zewn.	1" zewn.	1" zewn.

Table 6. Dimensions.

Dimensions BA-ST XXXX- 1FEDC					
		9030	9040	9050	
А	mm	780	883	940	
В	mm	673	774	832	
С	mm	530	602	650	
D	mm	315	323	337	
Е	mm	1325	1323	1477	
F	mm	167	175	189	
G	mm	255	273	287	
Н	mm	507	606	620	
1	mm	905	943	957	
J	mm	1025	1113	1127	
K	mm	1205	1293	1307	
L	mm	1398	1417	1545	
М	mm	1634	1694	1835	
W	mm	2	1-0/+15)	

AT	KNV Energietechnik GmbH, Gahberggasse 11, 4861 Schörfling Tel: +43 (0)7662 8963-0 Fax: +43 (0)7662 8963-44 E-mail: mail@knv.at www.knv.at
CH	NIBE Wärmetechnik c/o ait Schweiz AG, Industriepark, CH-6246 Altishofen Tel: (52) 647 00 30 Fax: (52) 647 00 31 E-mail: info@nibe.ch www.nibe.ch
CZ	Druzstevni zavody Drazice s.r.o, Drazice 69, CZ- 294 71 Benatky nad Jizerou Tel: +420 326 373 801 Fax: +420 326 373 803 E-mail: nibe@nibe.cz www.nibe.cz
DE	NIBE Systemtechnik GmbH, Am Reiherpfahl 3, 29223 Celle Tel: 05141/7546-0 Fax: 05141/7546-99 E-mail: info@nibe.de www.nibe.de
DK	Vølund Varmeteknik A/S, Member of the Nibe Group, Brogårdsvej 7, 6920 Videbæk Tel: 97 17 20 33 Fax: 97 17 29 33 E-mail: info@volundvt.dk www.volundvt.dk
FI	NIBE Energy Systems OY, Juurakkotie 3, 01510 Vantaa Puh: 09-274 697 0 Fax: 09-274 697 40 E-mail: info@nibe.fi www.nibe.fi
FR	NIBE Energy Systems France Sarl, Zone industrielle RD 28, Rue du Pou du Ciel, 01600 Reyrieux Tel : 04 74 00 92 92 Fax : 04 74 00 42 00 E-mail: info@nibe.fr www.nibe.fr
GB	NIBE Energy Systems Ltd, 3C Broom Business Park, BridgeWay, Chesterfield S41 9QG Tel: 0845 095 1200 Fax: 0845 095 1201 E-mail: info@nibe.co.uk www.nibe.co.uk
NL	NIBE Energietechniek B.V., Postbus 634, NL 4900 AP Oosterhout Tel: 0168 477722 Fax: 0168 476998 E-mail: info@nibenl.nl www.nibenl.nl
NO	ABK AS, Brobekkveien 80, 0582 Oslo, Postadresse: Postboks 64 Vollebekk, 0516 Oslo Tel. sentralbord: +47 23 17 05 20 E-mail: post@abkklima.no www.nibeenergysystems.no
PL	NIBE-BIAWAR Sp. z o. o. Aleja Jana Pawła II 57, 15-703 BIAŁYSTOK Tel: 085 662 84 90 Fax: 085 662 84 14 E-mail: sekretariat@biawar.com.pl www.biawar.com.pl
RU	© "EVAN" 17, per. Boynovskiy, Nizhny Novgorod Tel./fax +7 831 419 57 06 E-mail: info@evan.ru www.nibe-evan.ru



